



### Installation Instructions:

Before installing wiring harness, please be sure to read all manufacturer information for your gauges.

Your Gauge Connection Kit has 3 main parts, Lamp & Power Feed, Signal Feed, and Indicator Lamp Feed. Connect each as shown on the enclosed gauge connection kit instructions (92965220).

#### LAMP & POWER FEED

PINK	Gauge Ignition Power Feed
BLACK	Gauge Ground
GRAY	Lamp Power Feed

#### SIGNAL FEED CONNECTIONS

##### 6 POSITION CONNECTOR

DK GREEN	Temperature Sender
DK BLUE	Oil Pressure Sender
TAN	Fuel Sender
WHITE	Tachometer Signal
BLACK	Programmable Tach Ground

Mating 2 and 6 position connectors "K" and "A", and terminals "D" and "B" are supplied for connecting to your existing wiring system. Match your existing wire "function" with the wires in this kit. The purple and yellow wires are for your programmable speedometer. They **MUST** be twisted together around each other before connecting them to your vehicle speed sensor (VSS).

##### 2 POSITION CONNECTOR

PURPLE	Programmable Speedometer Sender
YELLOW	Programmable Speedometer Ground

#### INDICATOR LAMP FEED

##### 6 POSITION CONNECTOR

DK BLUE	Right Turn Signal
LT BLUE	Left Turn Signal
LT GREEN	Hi-Beam

A mating 6 position connector "C" and terminals "D" are supplied for connecting to your existing wiring system. Match your existing wire "function" with the wires in this kit.

Use supplied wires ties "E" to secure the harness at the gauge junction points.

If using a programmable speedometer and tach, use connectors F and terminals G following the manufacturer's instructions. An expansion connector H and terminals J are provided if additional gauge wiring is necessary.

## Danchuk # 12343

# 500505

Universal Gauge Wiring Kit

GAUGE DISCONNECT HARNESS

92965358 instruction sheet Rev 0.0 9/12/2001