



Fuel Gauge

INSTRUCTIONS


1. Remove instrument cluster and remove original Fuel Gauge from cluster.
2. Install Fuel Gauge into instrument cluster. Now reinstall Gauge Cluster into the dash and connect wires. See diagram below for wiring information.

NOTE: The fuel senders have a 0 to 30 OHMS + or - 10%

Fuel Gauges
10241



Back View of Wiring

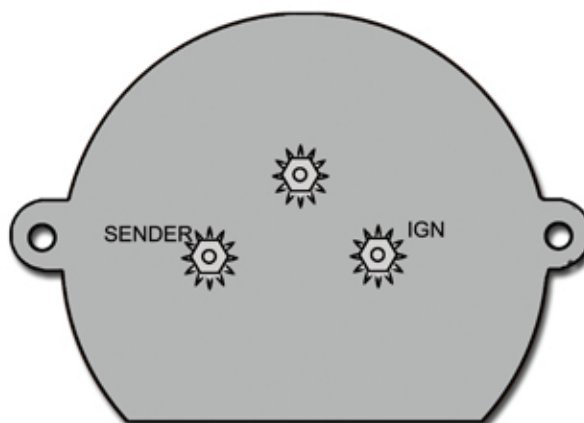

Make sure you connect wire to terminal as marked. Sender to Sender and IGN to power
Nothing will be connected to screw in upper center position

Testing the Gauge by use of OHM Meter

- | | |
|--------------------------------|-----------------------------|
| 1. Ignition to Ground 160 OHMS | 3. Ground to Sender 55 OHMS |
| 2. Ignition to Sender 105 OHMS | OHMS may vary + or - 10% |