






# 174C - FUR CHANNEL KIT 2 Window Kit No-Vent

13349A	 92" Flexible Channel (2 per Car)	LOCATION A
13321	 36 x 3/8" Fur Strip LH Exterior RH Interior (2 per Car)	B
13322	 36" x 3/8" Fur Strip LH Interior RH Exterior (2 per Car)	C
13349	 Screw Kit (1 per car)	



16522 Individual Channels are available  
See Instructions on Sheet 12.04 on how to fabricate front run channel from parts you removed. 16640 Glass Channel Kit is available as shown below including the 2 Vertical Run Channels.

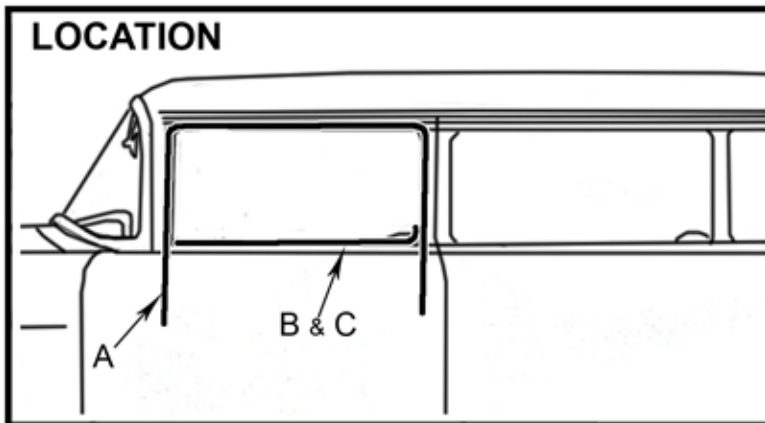

## 2DR WAGON NO-VENT WINDOW