




**TECH MANUAL**



**174C - FRONT FUR CHANNEL KIT  
2 Window Kit No-Vent and  
Build-A-Rear Center Side Window**

<b>174C Kit</b> Includes 2 - 13349A		LOCATION <b>A</b>
	92" Flexible Channel (2 per Car)	
2 - 13321		<b>B</b>
2 - 13322		<b>C</b>
1 - 13349	Screw Kit (1 per car)	

16522 Individual Channels are available  
See Instructions on Sheet 13.15 on how  
to fabricate front run channel from parts  
you removed. 16640 Glass Channel Kit is  
available as shown below including the  
2 Vertical Run Channels.

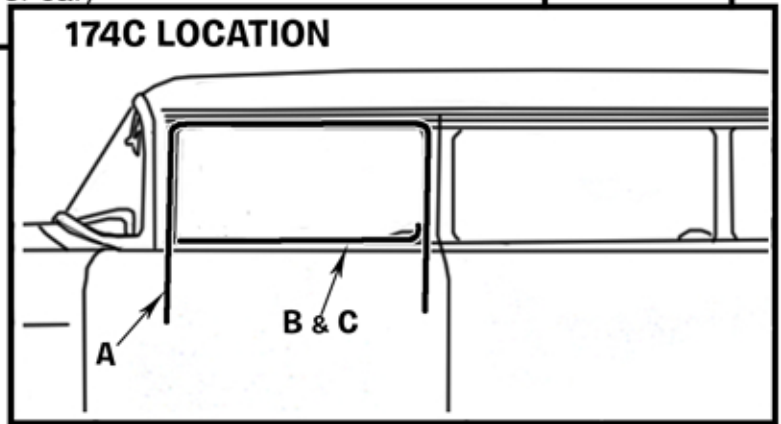

<b>Build Rear</b> 2 - 13318		LOCATION <b>D</b>
	60" Flexible Channel (4 per Car)	
2 - 13338		<b>E</b>
2 - 13339		<b>F</b>
2 - 13341		<b>G</b>

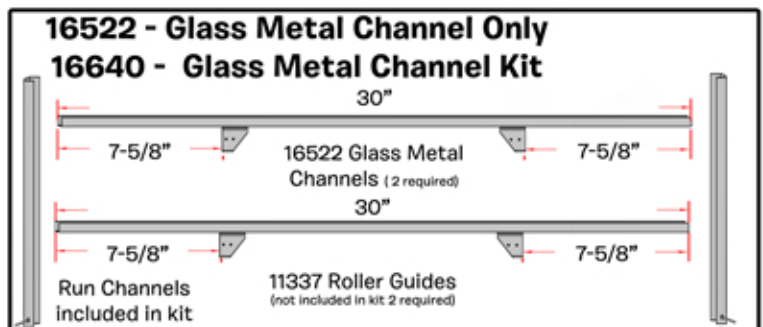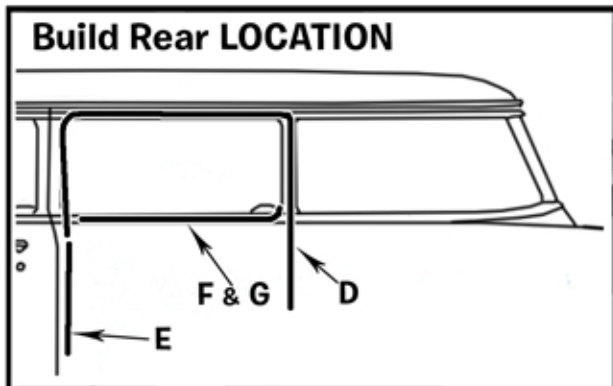

**2DR Wagon No-Vent**

Danchuk Tech Manual 55	
Section 15	Sheet 12.14