









TECH MANUAL

**175A - FUR CHANNEL KIT
2 Window Kit No-Vent**

13327	 80-1/2" Flexible Channel (2 per Car)	LOCATION A
13319 Trim to Fit	 26-1/2" x 3/8" Fur Strip LH Interior RH Exterior (2 per Car)	B
13320 Trim to Fit	 26-1/2"x 3/8" Fur Strip LH Exterior RH Interior (2 per Car)	C
13349	 Screw Kit (1 per car)	

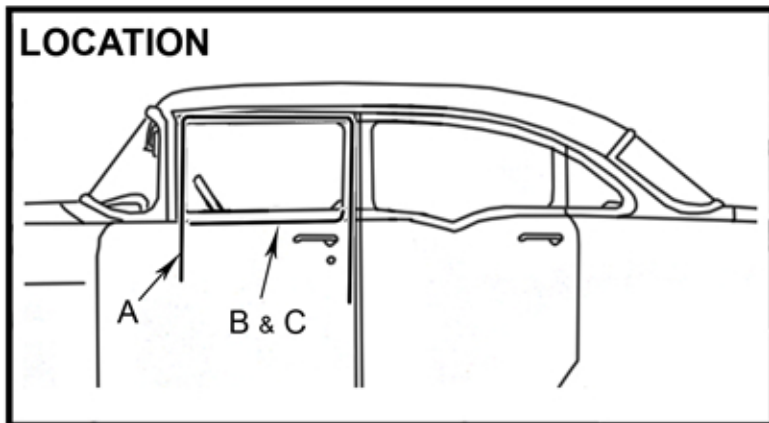

See Instructions on Sheet 11.06 on how to fabricate front run channel from parts you have removed. 16641 Glass Channel Kit is available as shown below including the 2 Vertical Run Channelsr.

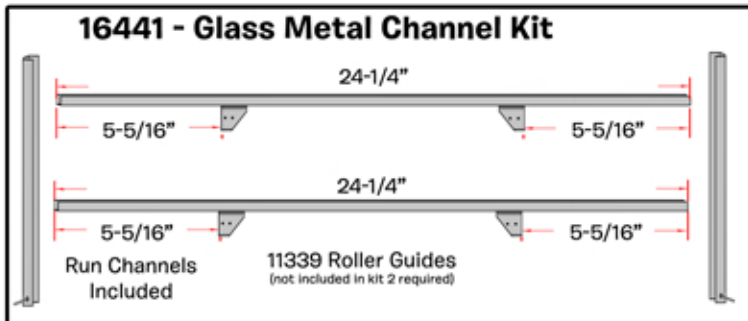

**4DR SEDAN
NO-VENT WINDOW
Also 4DR WAGONS**

Danchuk Tech Manual 55	
Section 15	Sheet 11.04