














176 - FUR CHANNEL KIT

TECH MANUAL

13305	 32" Division Bar Channel (2 per Car)	LOCATION A
13306 See Note	 24" x 3/8" Fur Strip Exterior (2 per Car)	B
13334	 19" x 1 5/8" Moleskin Liner (2 per car)	C
13331	 19 3/4" x 3/8" Bent Fur Strip LH Interior (1 per car)	D Driver Side
13349C	 20 1/4" x 3/8" Bent Fur Strip LH Exterior (1 per car)	
13332	 19 3/4" x 3/8" Bent Fur Strip RH Interior (1 per car)	E Passenger Side
13349B	 20 1/4" x 3/8" Bent Fur Strip RH Exterior (1 per car)	
13345	 3" x 3/8" Fur Strip Rear Exterior (2 per Car)	F
13333	 33 x 2 5/8" Moleskin Liner(2 per car)	G
13349	 Screw Kit (1 per car)	

NOTE: Not all Convertibles used the 13306 Fur Strips (B in Diagram) if no metal extension has been attached to the Door Belt Moulding (15671 - DS , 15672 - PS or 16515 - Pair). Those Convertibles use an Inner Roller Guide (14790) and Outer Roller Guide (2082).

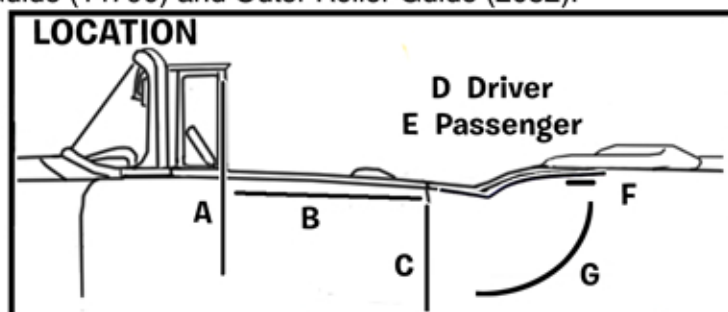

Convertible

Danchuk Tech Manual 56	
Section 15	Sheet 1.05