


NOTE: On these two pages, you will find all the parts necessary to connect your front parking/turn signal lamps and headlight bucket assemblies to your 1955-56 Chevy. These parts will be used together with the 500432, bag L main front light harness kit to complete the procedure. The parking/turn signal lamp connection procedure is shown on page 1, and the headlight bucket harness connections are shown on page 2.

PARKING LAMP ASSEMBLY

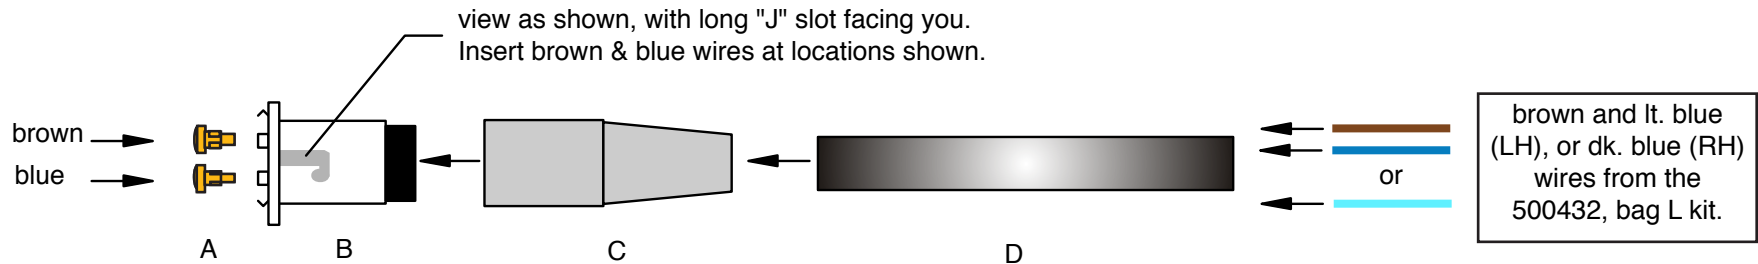

1. It will be necessary to do an in-line splice or other type of connection on the brown wire, as it must be used for both the LH and RH parking lamp assemblies.
2. Insert rubber tube D into boot C.
3. Insert parking lamp wires thru the boot & tube assemblies, then into the parking lamp socket assemblies B as shown above.
4. Install rivets A on the brown, and lt. blue (LH) or dk. blue (RH) wires.
5. Once the wires have been installed inside the lamp sockets, push the boot & tube assemblies up over lamp sockets so that they are sealed.


Part 11 of Danchuk # 11203 Instructions




American
Autowire

www.americanautowire.com 856-933-0801



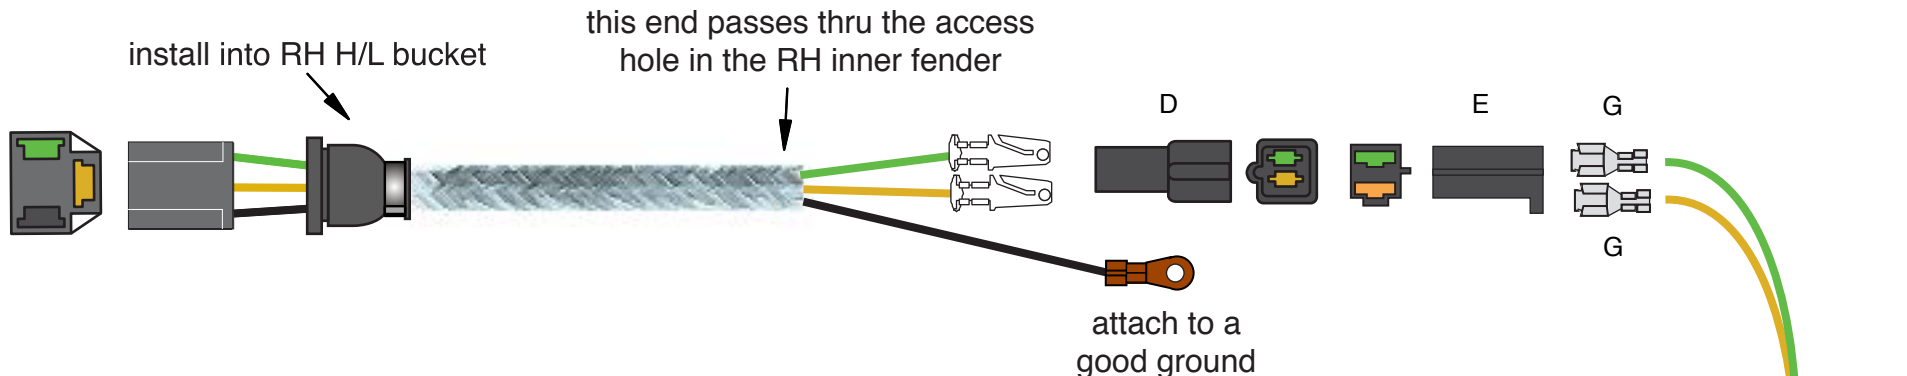

HEADLIGHT BUCKET ASSEMBLY

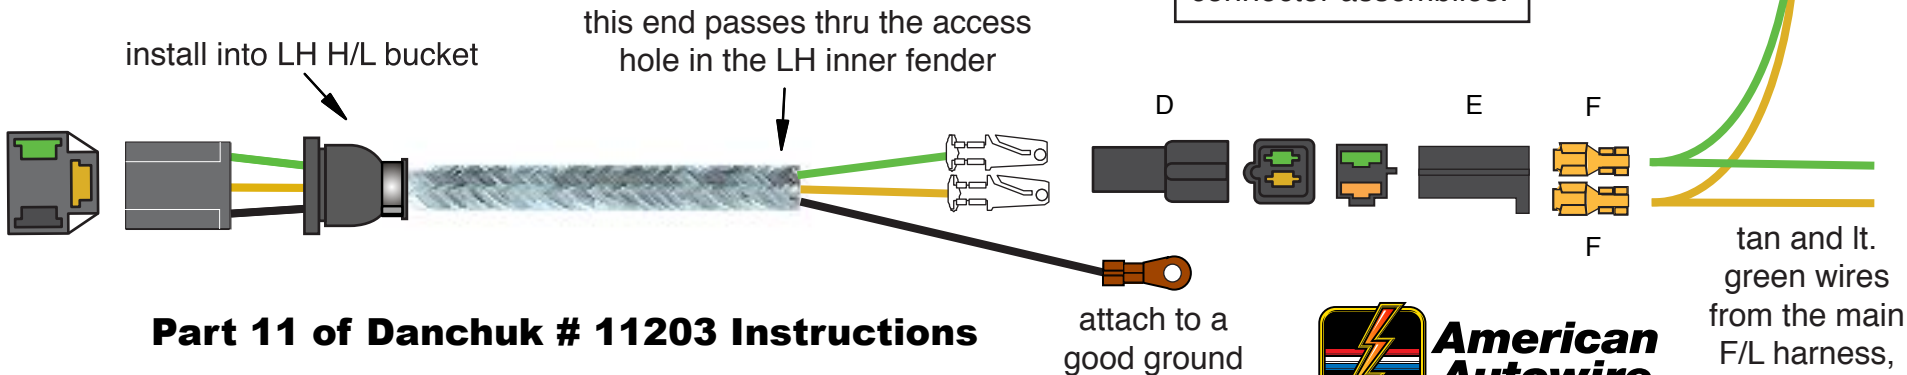

Part 11 of Danchuk # 11203 Instructions

1. There are 2 complete headlight bucket harnesses (item #1) included in this kit (500416).
2. Install one bucket harness into each bucket housing and snap the grommet and loom assembly into the hole in that bucket housing. Pass the loose end of each of the bucket harness assemblies thru the LH and RH inner fender panels.
3. Attach each ground wire (with the ring terminal on it) to a good known chassis ground. Make sure that the attaching areas have no 2-stage paint or powder coating on them or the grounds will not transfer, and your headlights will not work.
6. Once the tan and light green wires have been passed through the inner fender panels, you can then install each of the bare terminal ends on the tan and light green wires into the provided loose connectors D maintaining the color continuity as shown above.
7. You will plug these completed bucket harness assemblies into the front light harness (500432) as shown above. Connectors E, terminals F (wider for LH) and G (narrower for RH) have been provided so that you can connect the H/L bucket harnesses into the main front lighting harness.



American Autowire

www.americanautowire.com 856-933-0801

Classic Update Series
 1955-56 Chevy Car
 Parking Lamp and Headlight Grommet Kit
500416
 92965035 instruction sheet Rev 4.0 3/22/2013

bag **K**