


NOTE: American Autowire relay kit 500479 is recommended for use with this switch. We only sell high quality fan relay kits and temperature switches.

order part 500479
Universal Relay Kit

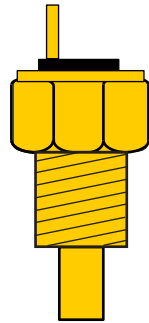

Installing your new sensor in your cylinder head.

DO NOT over tighten!

The switch has tapered standard pipe thread (NPT) that self seals by design. Damage to sensor from over tightening or excessive corrosion will void the warranty.

DO NOT use pipe sealants or teflon tape!

The switch grounds through the cylinder head and this will interfere with the switch ground.

Use only with coolant containing corrosion inhibitors or antifreeze.

Use the supplied terminal and connector for connection to the switch.

another wiring product by...



**American
Autowire**

We Make Wiring Easy!!

Danchuk # 19005


Electric Fan Switch
3/8 X 18
on 195 deg. off 180 deg

500880

92968067 instruction rev 1.0 12/22/2008

NOTE: American Autowire relay kit 500479 is recommended for use with this switch. We only sell high quality fan relay kits and temperature switches.

order part 500479
Universal Relay Kit

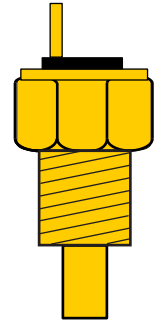

Installing your new sensor in your cylinder head.

DO NOT over tighten!

The switch has tapered standard pipe thread (NPT) that self seals by design. Damage to sensor from over tightening or excessive corrosion will void the warranty.

DO NOT use pipe sealants or teflon tape!

The switch grounds through the cylinder head and this will interfere with the switch ground.

Use only with coolant containing corrosion inhibitors or antifreeze.

Use the supplied terminal and connector for connection to the switch.

another wiring product by...



**American
Autowire**

We Make Wiring Easy!!

Electric Fan Switch
3/8 X 18
on 195 deg. off 180 deg

500880

92968067 instruction rev 1.0 12/22/2007