







Tools needed:

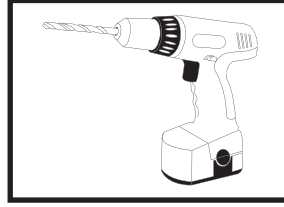


DRILL

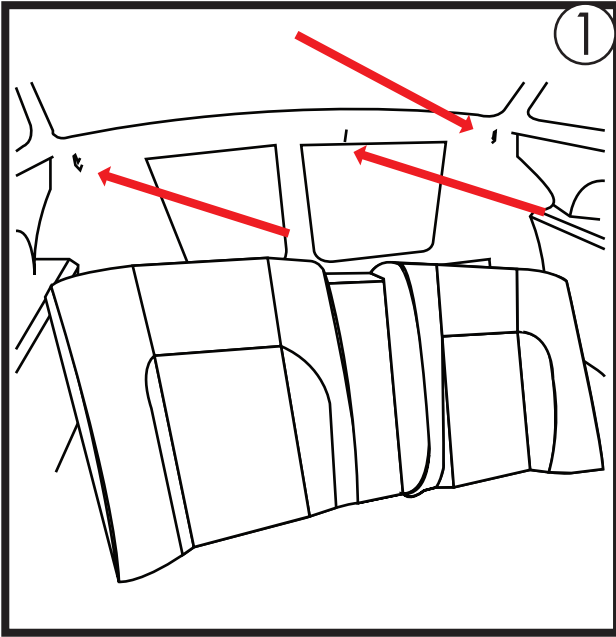


Step 1: Installing the back rest of your rear seat. The back rest attaches with rear substrait hooks (pointed out with arrows in Picture 1) You will have to hook the seat onto the hooks at an angle then lower the backrest into position using a hinge type of motion.

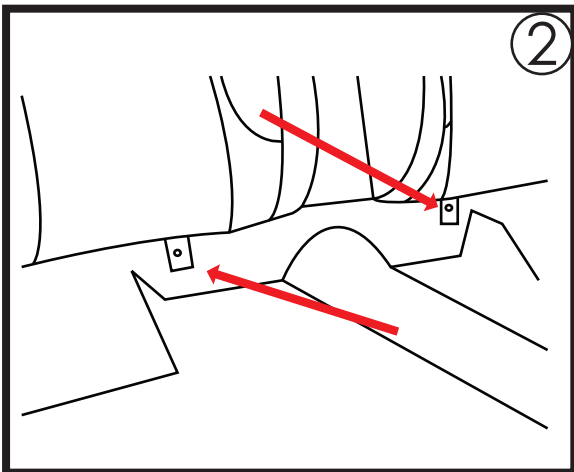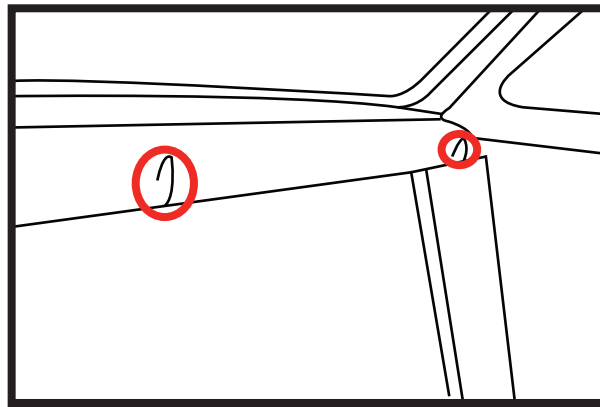

Step 2: Screwing in the backrest. Once the backrest is in and laying on rear seat sub structure you will run the self tapping screws into the rear seat tabs. The screws go through two tabs located on the bottom of the backrest this is what will hold seat in place.

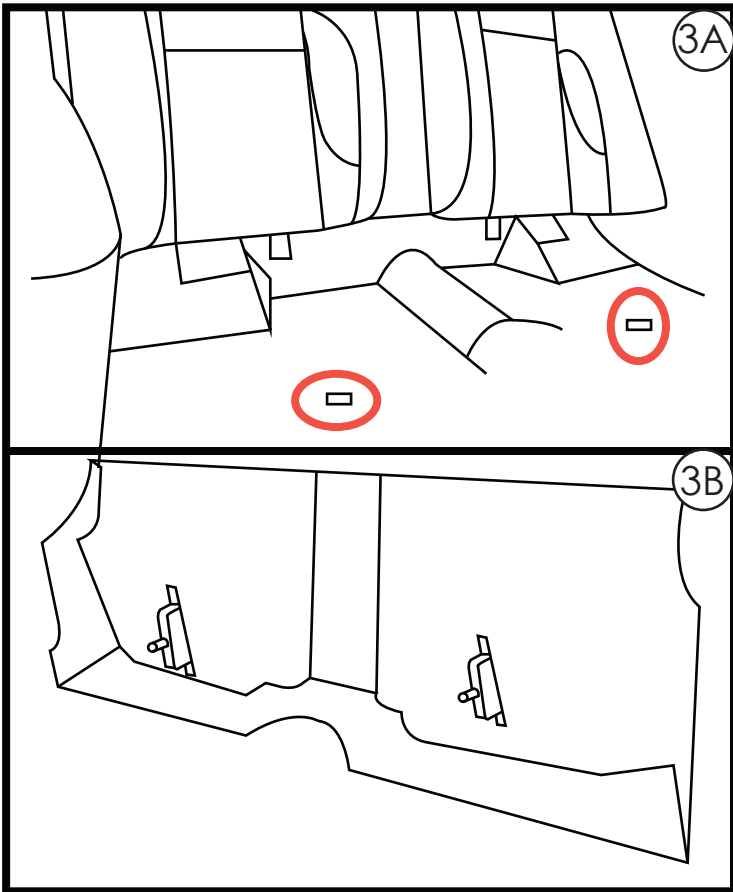

Step 3: Installing the bottom of your rear seat. For this step you will need to note key features on your floor pan and rear seat bottom. On the floor pan note the two holes that are circled in picture 3A. On the bottom rear seat look at the underside and note the bottom mount tabs underneath illustrated in picture 3B.

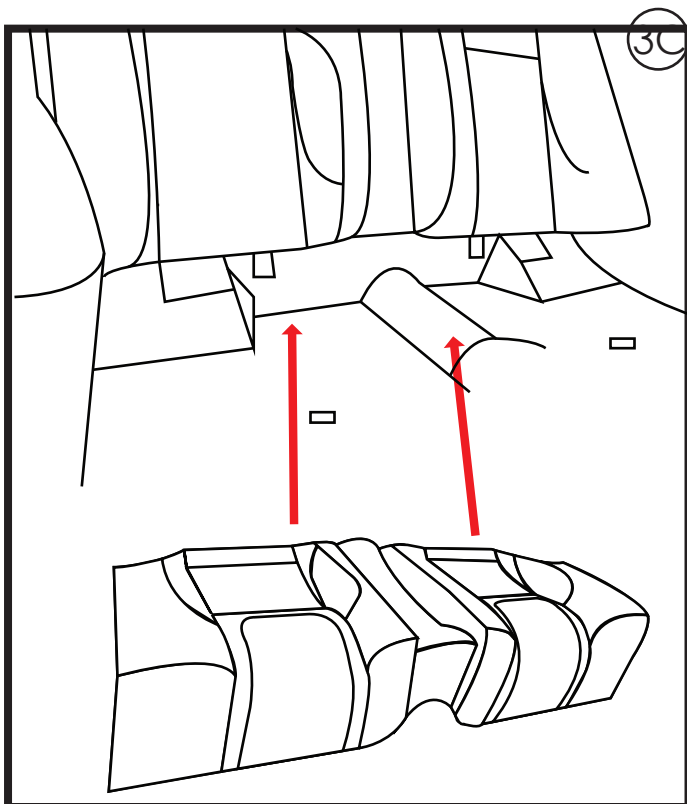

Then follow Picture 3C. Slide the bottom of your rear seat into place. This will take alot of moving and shifting of the rear seat bottom as it is a tight fit. You will push the rear seat bottom all the way in untill you feel the previously mentioned posts (3B) fall into the floor pan holes (3A).