


Bel Air Trunk Kit



A professional is recomened for all TMI Products installs

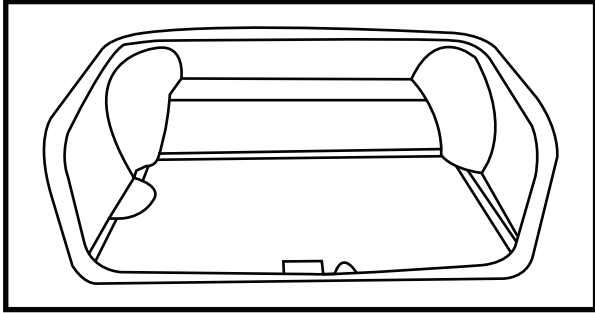


No Tools Required




Step 1: Starting with the floor panel. It will have velcro at three corners and pre-cut to fit around the stock wheel wells, filler neck tunnel and hood latch mechanism. It will sit down on the floor board, leaving the velcro facing inward on the car.

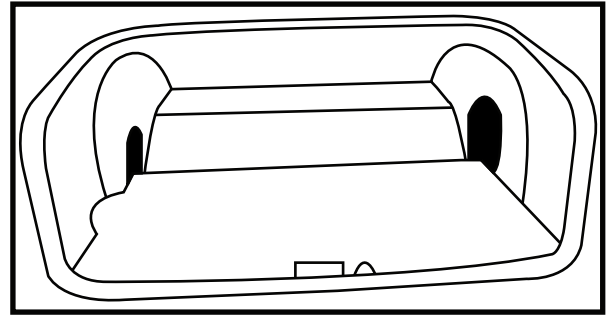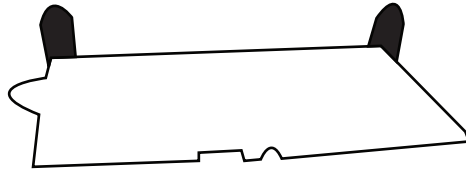

Step 2: After the floor panel is in place the carpet is installed. The carpet sits down into the base board. you will notice two pieces of vinyl on the carpet. These pieces of carpet go towards the wheel wells and should be able to go up the wheel wells with the colored side facing out.

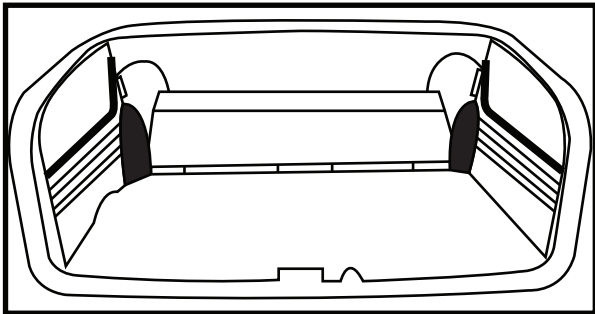

Step 3: Fit the side panels in. You will notice the side panels have velcro tabs and wheel well cuts. The side panels will go in top side first fitting slightly behind the trunk hinge while the velcro tabs should sit right in front of them. The side panels sit into place with the velcro at the bottom to the floor panel. Note: The vinyl from the carpet should be rolled up on to the wheel well and held in place with the panel.

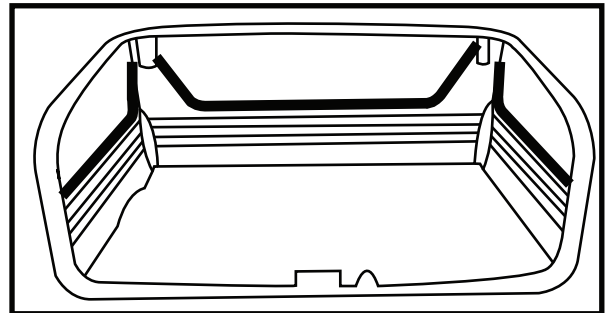

Step 4: Final step is to fit the middle panel in the trunk. The panel will have cut outs to go around the trunk hinge structure. The panel will go in top side first. There it will attach to the side panel velcro tabs. You will "swing" the panel down to the velcro tabs at the bottom. Once your back panel is in you can adjust it and the to side panels for final fitment.