




## Nomad Liftgate Seal to Main Liftgate Seal

## INSTRUCTIONS

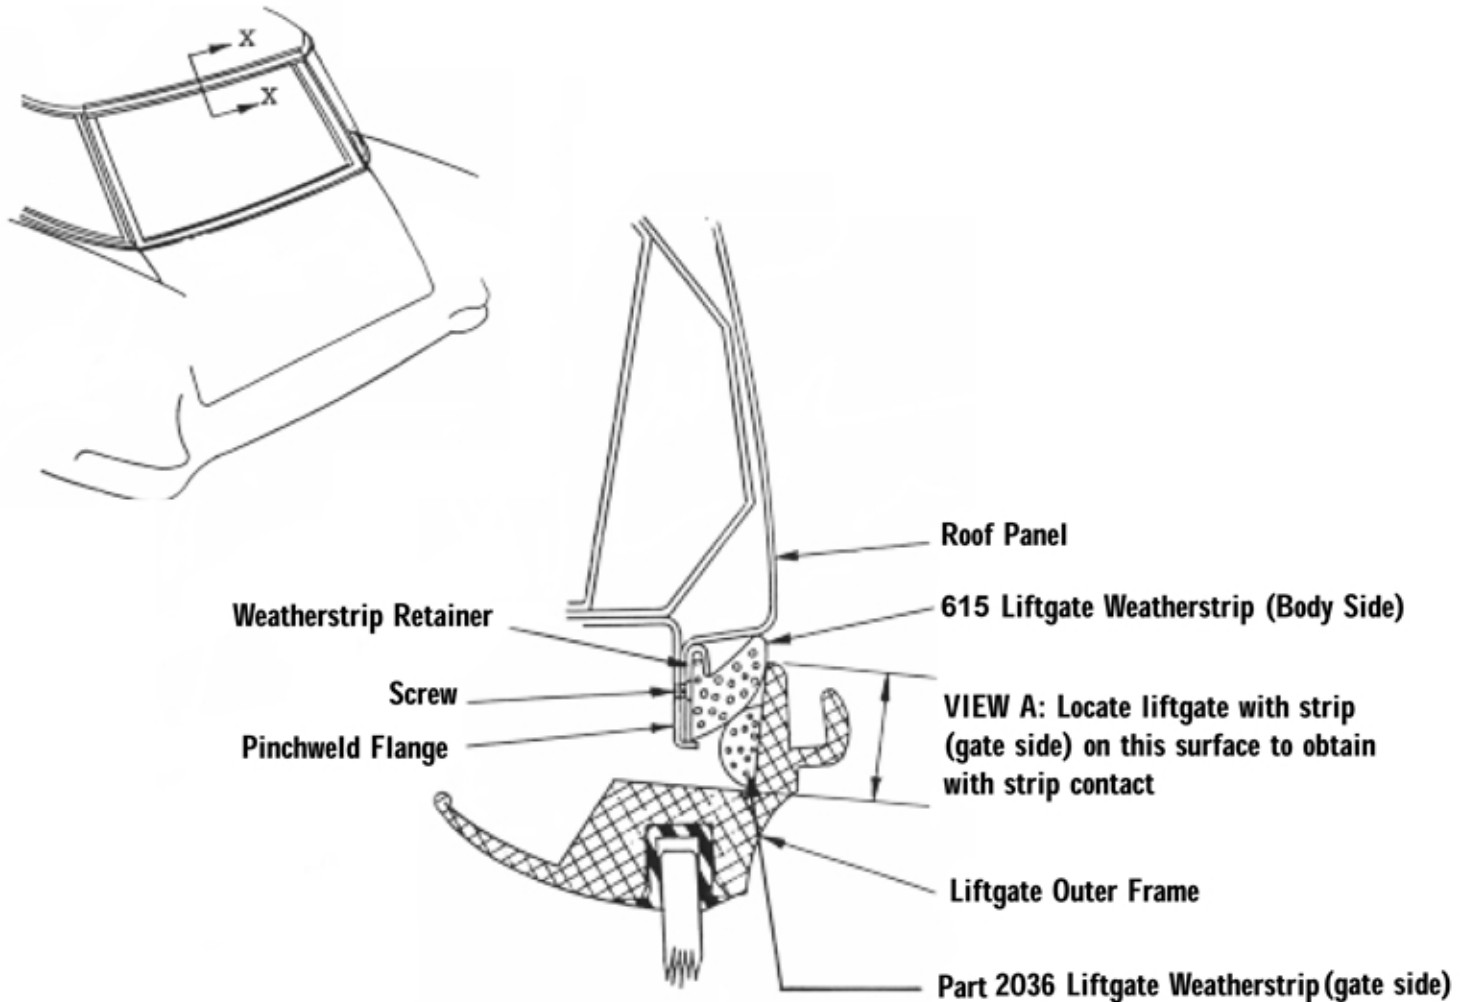

1. Raise liftgate and determine the location of the seal to make contact with body seal (see View "A" footnote).
2. Now that you have location determined, we suggest that you remove the upper liftgate from the hinges for an easier seal installation. (You may try to install seal on liftgate without removal of liftgate, but we don't recommend it.)
3. Clean upper surface of liftgate (where seal is to be mounted) with 3M Adhesive Remover.
4. Apply 3M Weatherstrip Adhesive to 2036 Seal and mount to liftgate. You might have to use 3M Masking Tape to hold seal in place.
5. Let seal cure for 1 day and reinstall liftgate to hinges.

**Note:** This seal was introduced to Nomad owners November 1, 1955 to solve a common waterleak problem in the upper liftgate. This seal may not resolve the problem completely, but it will help tighten up any gaps due to poor liftgate alignment.