


# PART # - 461 - 474 Hood Bar

*Instruction Sheet Master*


Revised 10/2018



1956

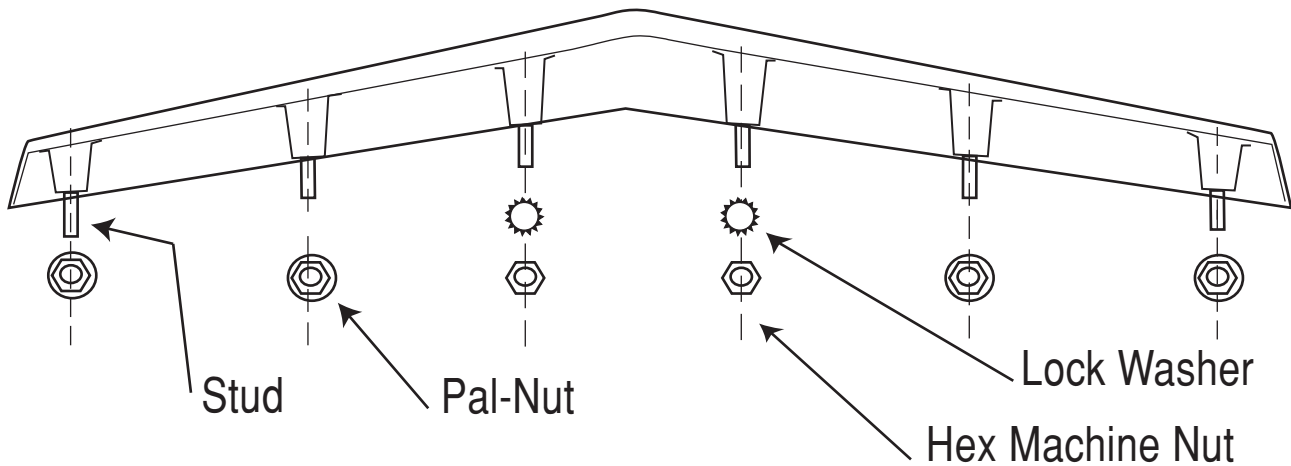

1957

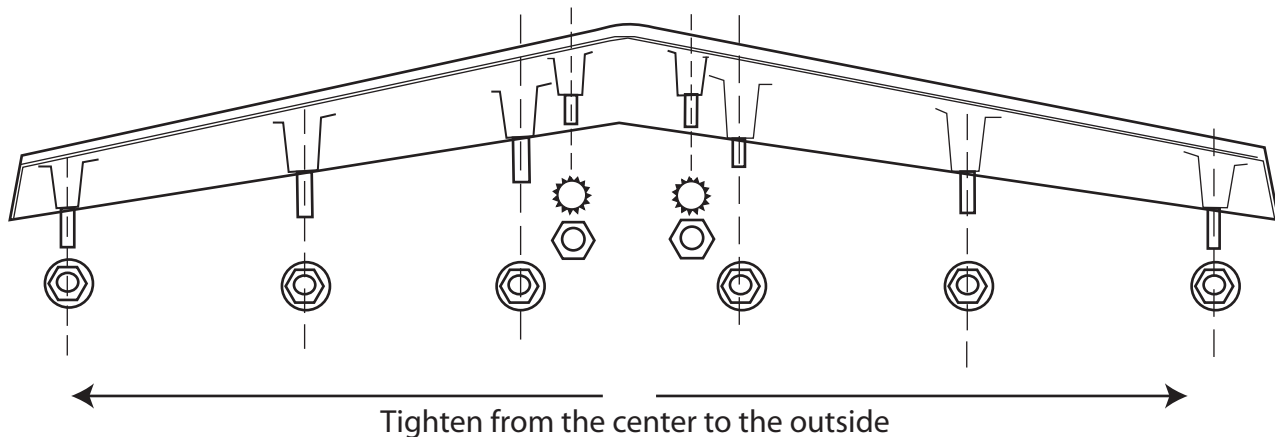

1. Insert the studs on the bosses on the hood bar.
2. Carefully place the bar onto the hood.
3. Install the hex nuts. Starting from the center and working toward the outside, lock washers and pal-nuts as shown above.
4. Gently hand-tighten all of the nuts.
5. Now, tighten the nuts again starting with the two center studs and working your way out being careful not to over-tighten. Damage to the paint and chrome could result.