


PART # - 562

1955-56 Trunk Weatherstrip

Instruction Sheet Master

Revised 12/2017

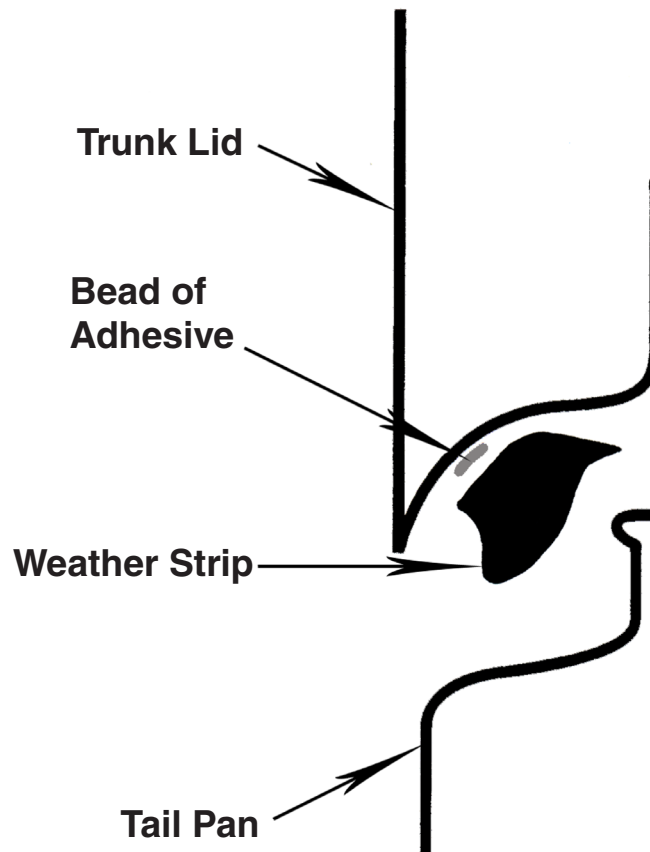

1. Clean the surface of the rubber that is going to be glued to the trunk lid with 3M General Purpose Adhesive Cleaner or lacquer thinner.
2. Clean the painted surface of the trunk lid with the 3M General Purpose Cleaner or with soap and water.
3. Carefully apply a medium sized bead of 3M Weatherstrip Adhesive, part number 036, to the weatherstrip and to the trunk lid as shown above.
4. Keep the trunk lid open for a minimum of 4 hours to allow the adhesive to cure. For best results we recommend that you leave the trunk lid open overnight.

Danchuk would like to thank you for purchasing this quality reproduction part. You, the consumer, are the best source of opinion, comments, and suggestions. Should you have any comments or recommendations for this instruction sheet and/or part, please feel free to contact us.